


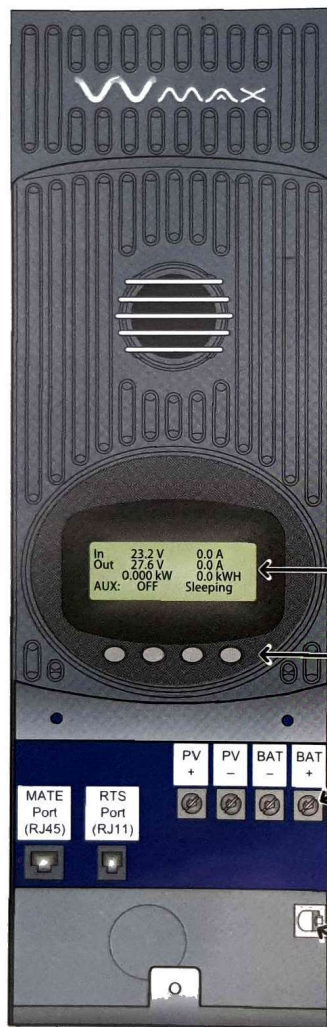

Wmax 80 Charge Controller



Wmax 60 Charge Controller



Models:

- **Wmax 80**: 80 amps maximum continuous output current (up to 40°C without thermal derating)
- **Wmax 60**: 60 amps maximum continuous output current (up to 40°C without thermal derating)

Features:

- Supports 12, 24, 36, 48, and 60 Vdc battery voltages
- Backlit display screen (LCD) with 80 characters (4 lines, 20 characters per line)
- Last 128 days of operational data logging
- Voltage step-down capability allowing a higher PV array voltage configuration
- Manual and automatic equalization cycles

Screen Versions:

- **English**
- **Spanish**
- **Australian** (English with different default settings)

Recommended Input PV Wattage per Charge Controller*

Battery Bank Voltage	Maximum PV Input Wattage for the Wmax 80	Maximum PV Input Wattage for the Wmax 60
12 Vdc	1000 W	750 W
24 Vdc	2000 W	1500 W
36 Vdc	3000 W	2250 W
48 Vdc	4000 W	3000 W
60 Vdc	5000 W	3750 W

*Standard Test Conditions

 
LCD Screen

Soft Keys


Terminals
Torque = 4 Nm (35 in-lb)

The interior design is identical in each model.

Startup Screen




Status Screen

 

- ★ Advances to the main menu screens
- ★ Advances to the end-of-day screens

Navigation:

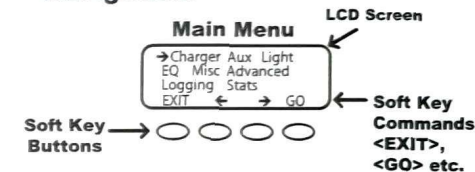

Soft Key Color Code:

- Available menus
- Select this option to proceed
- Adjusts the set points value
- Selects a function (e.g., ON, OFF, AUTO)
- Switches between devices on the ports of the Communications HUB
- Navigation colors

NOTE: Soft key functions will vary depending on the selected menu and are defined by the word above the key in the LCD.



Indicates a 1-screen movement within a Menu. These are color coded according to their function or purpose.

If accompanied by a dashed line, pressing that soft key will return the user to the location identified by the dashed line. This will vary depending on the devices in the system.

NOTE: See page 2-4 of this guide for menu maps for setting the versions, changing the language of the screens, and accessing the main menu.

See the Wmax Series Owner's Manual for details on the settings available in the main menu.

To change the Language, Screen Version or System Voltage:

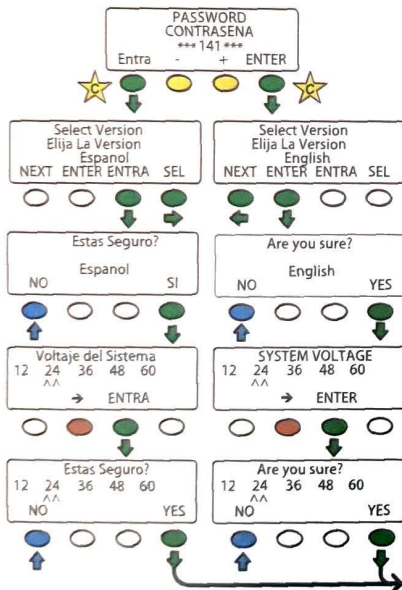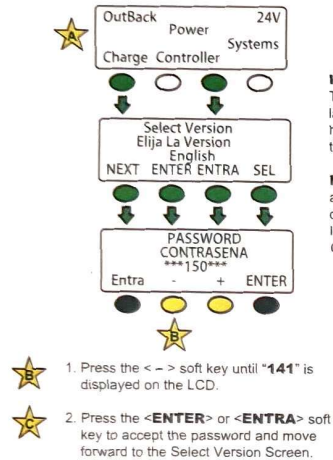


IMPORTANT:

To access the screens to change the language or system voltage, press and hold the 1st and 3rd soft key at the same time, THEN CLOSE THE DC BREAKERS.

NOTE: Changing these setting will revert all other settings back to the factory defaults. Any customized settings will be lost. See the *Wmax Series Charge Controller Owner's Manual* for details.


The Spanish Status Screen is not shown in this illustration. It is available in the Spanish translation of this document.

Status Screen

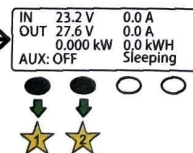


To access the Main Menu:

 Status Screen



Main Menu Screen

 

To select a menu from the Main Menu, press the <←> or the <→> soft key to move the cursor (→). When the → is next to the desired menu, press <GO>.

➤ Charger—CHARGER SETUP

Adjusts the Current Limit, Absorbing, and Float recharging voltage set points

➤ Aux—AUX OUTPUT CONTROL

Secondary control circuit for a vent fan, AGS, error alarm, and other system-related additions

➤ Light—BACKLIGHT CONTROL

Adjusts the backlighting of LCD screen and soft key buttons

➤ EQ—BATTERY EQUALIZE

Activates battery equalization (manually or automatically)

➤ Misc—MISCELLANEOUS

Additional settings and service information

➤ Advanced—ADVANCED MENU

Optimizes/fine-tunes the charge controller

 
➤ Logging—DATA LOGGING

Displays recorded power production information

➤ STATS—STATISTICS


Displays recorded peak system information and cumulative kilowatt-hours and amp-hours

Main Menu Screen



Press <↓> to move the → next to the desired setting.
Press <-> or <+> to adjust the setting.
Press <EXIT> to return to the main menu.

 
Charger Screen



Continued on the next page.



End-of-Day (EOD) Summary Screens

 Status Screen



NOTE: The values shown in this illustration will vary depending on the nominal DC voltage.

 End-of-Day (EOD) Summary Screen (current day)

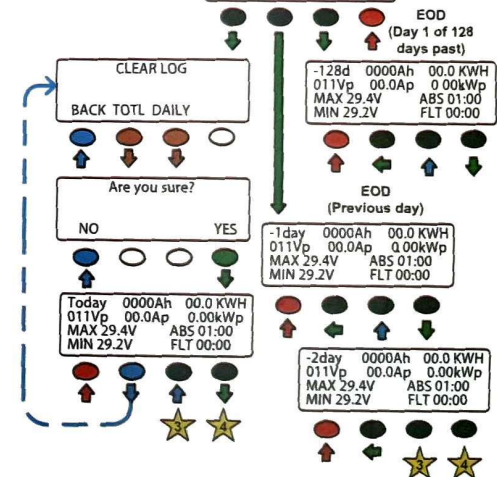

Continuing to press this soft key will cycle backwards by 1 day up to 128 days.

Press and hold this soft key to automatically scroll backwards through the available days.

Continuing to press this soft key will cycle forward by 1 day up to 128 days.

Press and hold this soft key to automatically scroll forward through the available days.